


**GASKET INSTRUCTIONS FOR INSTALLATION TO BSUCF03V
VALLEYLAB AIRFORCE SMOKE EVACUATION SYSTEM**

**DISCARD THIS GASKET IF YOUR VALLEYLAB AIRFORCE SMOKE EVACUATION UNIT
DOES NOT HAVE RAISED BOLTS INSIDE FILTER CAVITY**

*Use the Peel & Stick Gasket enclosed
and firmly attach to bottom of BSUCF03V Filter as shown below.
When complete, insert your filter into the unit and follow standard operating procedures.*

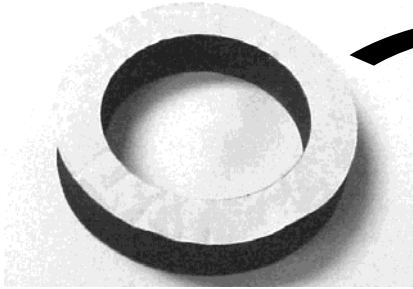

Attach to filter sticky side down


DO NOT ATTACH TO SMOKE
EVACUATION UNIT

04/03/02
Rev.A.
χ

**GASKET INSTRUCTIONS FOR INSTALLATION TO BSUCF03V
VALLEYLAB AIRFORCE SMOKE EVACUATION SYSTEM**

**DISCARD THIS GASKET IF YOUR VALLEYLAB AIRFORCE SMOKE EVACUATION UNIT
DOES NOT HAVE RAISED BOLTS INSIDE FILTER CAVITY**

*Use the Peel & Stick Gasket enclosed
and firmly attach to bottom of BSUCF03V Filter as shown below.
When complete, insert your filter into the unit and follow standard operating procedures.*

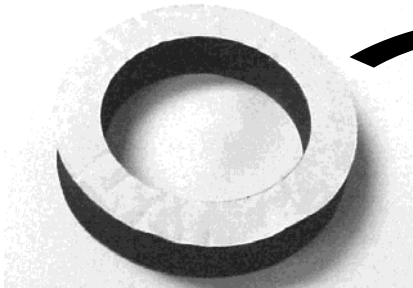

Attach to filter sticky side down

DO NOT ATTACH TO SMOKE
EVACUATION UNIT

04/03/02
Rev.A.
χ